

Supply and Sound Attenuator Duct Installation Instructions

GENERAL

The supply and sound attenuator flexible air ducts come in both 2-inch (51mm) and 2 ½ inch (64 mm) inside diameter sizes with 4 options available for increased R- values (see table 1). All models are class 1 air duct listed with ETL per UL-181 and Canadian standard CAN/ULC STD S110-M89. All models are recognized and listed with ICC-PMG to meet building code regulations.

Table 1. Duct R-Factor (Imperial)

Table 1. Duct K-Factor (Imperial)					
Model	Outside Dia, inch [mm]	R-factor °F·hrft²/Btu [W/m²·K]			
		Rated*	Effective**		
UPC-26C UPC-25	3.5 [89]	3.3 [18.7]	4.0 [22.7]		
UPC-26C-R4					
UPC-26D-R4 UPC-25 - R4	4.0 [102]	4.2 [23.8]	5.8 [32.9]		
UPC-26C-R6 UPC-25-R6	5.0 [127]	6.0 [34.0]	9.5 [53.9]		
UPC-26C-R8 UPC-25 - R8	6.0 [152]	8.0 [45.4]	13.7 [77.8]		
UPC-226 UPC-225	4.0 [102]	3.3 [18.7]	3.9 [22.1]		
UPC-226-R4 UPD-226D-R4 UPC-225-R4	4.5 [114]	4.2 [23.8]	5.5 [31.2]		
UPC-226-R6 UPC-225-R6	5.5 [140]	6.0 [34.0]	9.0 [51.1]		
UPC-226-R8 UPC-225-R8	6.5 [165]	8.0 [45.4]	12.9 [73.3]		

^{*} per ADC Flexible Duct Standard, based on flat thickness, k=.24 Btu-in/h•ft²•°F ** per ASHARE 2001 Fundamentals Handbook p. 23.21, based on curved thickness

Note: Data at 15 ft duct length at 120°F

INSTALLATION OF UPC-25/225 and UPC-26/226

Tools and Parts required:

- Supply Tubing Clamps or Scrim Core Clamps (See Table 2)
- Clamp Pliers (Unico part no. UPC-54)
- Utility knife
- Wire Cutter (for sound attenuator install)
- UL-181B duct tape

Table 2. Clamp Identified Table

Used With		Clamp Unico P/N	Color	Code (Stamped)
2- Inch	Supply Tubing	UPC- 52A	Black	605
	Sound Attenuator	UPC- 53B	Silver	575
2 ½ inch	Supply Tubing	UPC- 252	Black	725
	Sound Attenuator	UPC- 253	Silver	680

Connecting the supply tubing or the sound attenuator to the plenum requires a plenum take-off. Refer to Bulletin 30-050 for the plenum take-off instructions. See Figure 2 for assembly view.

Table 3. Plenum Take off table

Duct	Plenum		
Size	Round Metal	Flat Metal	
2-Inch	UPC-28	UPC-28F	
2 ½ Inch	UPC-228	UPC-228F	





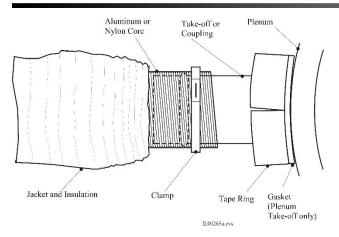


Figure 1. Assembly view of duct

Joining two pieces of supply tubing requires a coupling. A coupling is also required to connect the supply tubing to a sound attenuator.

DO NOT DISCARD PLASTIC TAPE RINGS ATTACHED TO THE TAKE-OFF AND COUPLINGS. The plastic tape rings will prevent compressing the outer insulation and losing your insulating effect at the connection. Condensation may form on the exterior of the duct if the tape ring is not used.

STEP 1. Cut a length of tubing long enough to reach both ends without stretching or placing undue stress on the tubing or connections. The minimum bend radius of the tubing is 6-inches (152-mm).

STEP 2. Pull back the insulation of the tubing about 4-inches (102-mm) to expose the inner aluminum or nylon core. Slip a supply or scrim core clamp over the outside of the core. Then slip the core over the end of the take-off or coupling.

NOTE: "605, 575, 725, and 680" is stamped on the outer rim of the clamp for the supply tubing or the sound attenuator, respectively. See Table 2

STEP 3. Position the clamp and tubing over the ridge or dimple before tightening clamp to prevent the duct from slipping off. Using the clamp pliers, crimp the clamp "ear" to tighten the clamp. Be sure that the pliers reach under the clamp so that the flat portion of the ear is not bent. Crimp with sufficient force to close the clamp but not so much as to cut the clamp. See Figure 2 for detail.

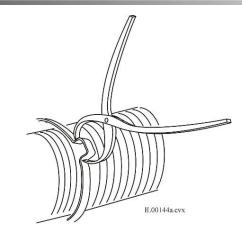


Figure 2. How to crimp the clamp to the duct

ALTERNATE (For supply tubing installation only): If clamps are not available, use two self-tapping screws to secure the aluminum core to the take-off or coupling.

STEP 4. (For supply tubing installation only) Seal the core by wrapping with aluminum tape listed and labeled in accordance with UL-181A and marked "181A-P".

(For sound attenuator tubing installation only) Stuff the insulation and outer jacket under the tape ring as best you can. Then seal the outer jacket to the tape ring with tape listed and labeled in accordance with UL-181B and marked "UL-181B-FX". The same goes for the R6 and R8 duct as well as the Double Vapor Barrier (UPC-26D/226D) duct. See Figure 4 for detail view.

STEP 5. Each duct run should be supported at a minimum of every 6 feet to prevent sagging and bunching of the tube. This will help to reduce restriction within the duct and allow for the most efficient air flow.

INSTALLATION OF UPC-26CR6 AND UPC-26CR8

The R-6.0 and R-8.0 duct will not compress enough to push through the 4-inch hole for the supply outlet. Connect a 2 ft. (610 mm) length of R-4.2 duct to the outlet and couple it to the R-6.0 or R-8.0 duct. The R-4.2 duct will pass through the 4-inch hole. See Figure 3 for details. If R-6.0 or R-8.0 duct is to be maintained throughout the entire length of attenuator, pull back the outer two layers, pass the R4.2 duct through the 4-inch hole and release the outer two layers of the R-6.0 or R-8.0 duct back to mate up with the wall (Figure 4).


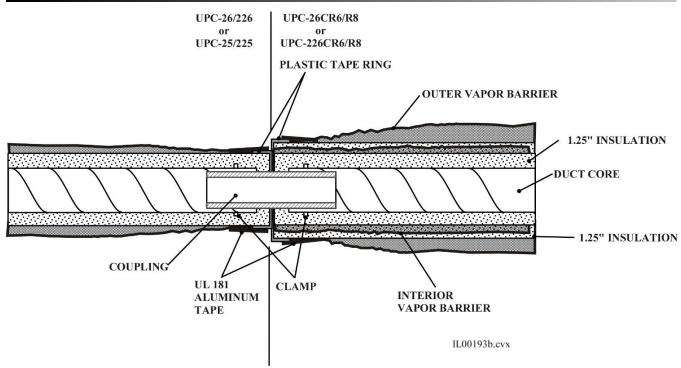


Figure 3. Detail of Duct Connection

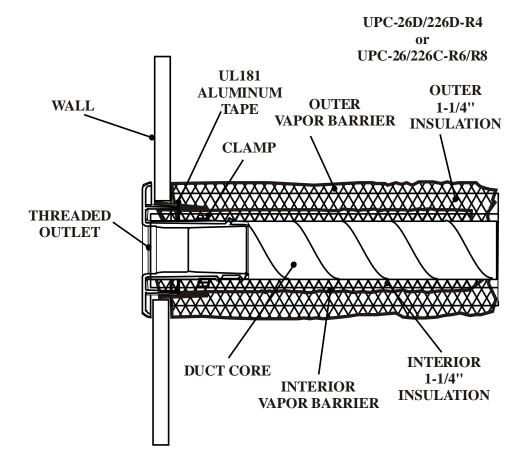

IL00575a.cvx

Figure 4. Detail View of Double Vapor Barrier